

Ducati StreetfighterV2 BBS Fuse Removal


1. Locate the Fuse/Battery cover. This is located on the clutch side of the bike.



2. Using a 3mm Allen key wrench, remove the single screw holding on the Fuse/Battery cover



3. Slide Fuse/Battery cover backwards to remove the Fuse box and battery.

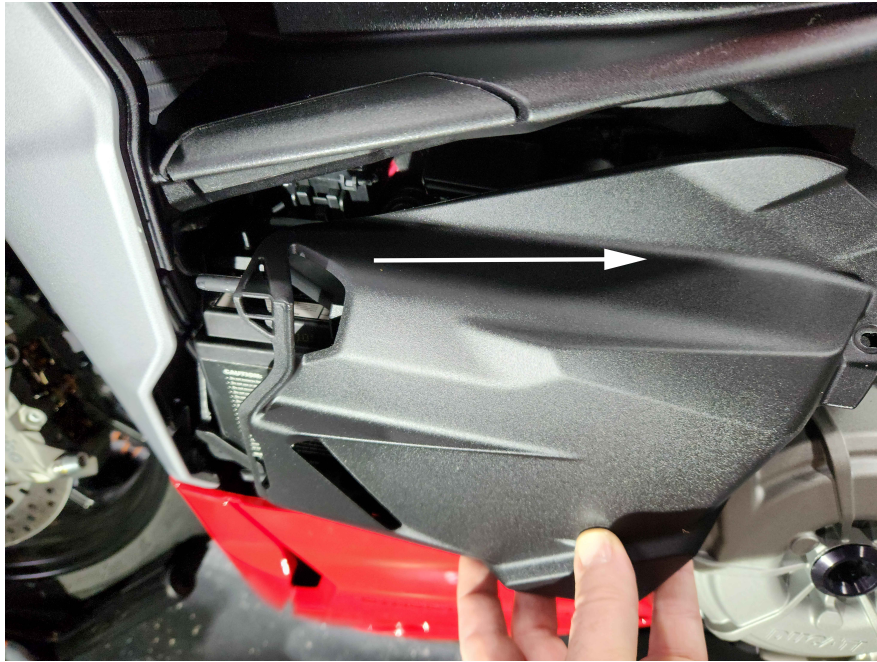

4. BBS Fuse box is the most rearward fuse box.



5. BBS Fuse is the middle located 10A Fuse.

