

ACCROSSATO

OIL TANK CAPS



Assembly instructions

Assemble the under-cap ring to the gasket and then to the cap, as shown in the figure. **ATTENTION:** apply enough pressure to push and make the ring adhere to the cap.

